


Ciminelli Lounge

Tascam CD-RW901 KKII Operating Instructions:

1) Power ON the CD Recorder, BUT Please Remember to *TURN OFF* the recorder when you are finished with it.

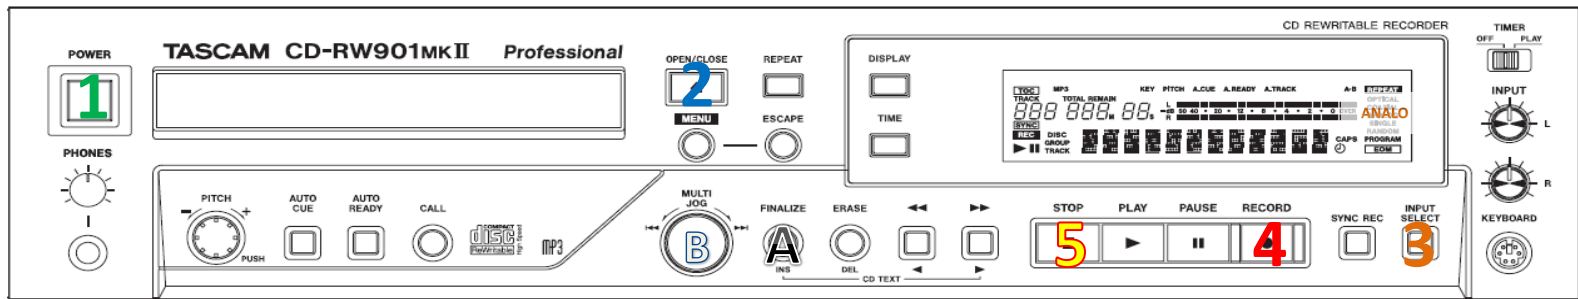

2) Press [OPEN/CLOSE] to open the disc tray and insert your disc with its label facing up.



Note: Once the Tray closes, TOC period will Flash while it finds the type of CD it is, WAIT for that to stop and then go on to the next step. **NOTE: Use Only CD-R's for Recording**

3) INPUT Select, Make sure that the ANALOG light is selected. It should blink on and off, that is ok!
PLEASE NOTE: It should always be in that position, so you may never really need to change it at all.

4) Press [RECORD] to start the recording process. It will go into a Record Pause Mode at this point. To start recording at this point, Press either the [PLAY] or [PAUSE] button to start recording.

5) Press [STOP] to stop recording all together or to make a New Track. Then you would just redo step 4.

AFTER RECORDING: YOU NEED TO FINALIZE YOUR DISCS TO PLAY BACK ON OTHER DEVICES

To Finalize a disc:

A) Load the unfinalized disc, and with the unit in the STOP mode, Press the [Finalize] Key.

The display shows FINALIZE?

B) To start the finalizing process, gently push in the MULTI JOG dial.

The display shows Sure?

Then gently press it, once more to Confirm.

NOTE: If you do not want to proceed with the finalizing process, press the STOP key [5].

When finalization has been chosen, the display shows TOC Flashing and the remaining time. The unit starts counting down from the time shown. When finished TOC will stop flashing and the display will show Complete.

Don't forget to turn OFF the Recorder when you are finished with it.

If you have any **questions, problems** or if you would like to **schedule a training session**, please contact: Technology & Media Production Office: x 4-1130 (Monday-Friday, 9AM-5PM) or Email: a-v@esm.rochester.edu