


Ciminelli Lounge

TOSHIBA DR430KU DVD Video Recorder Operating Instructions:

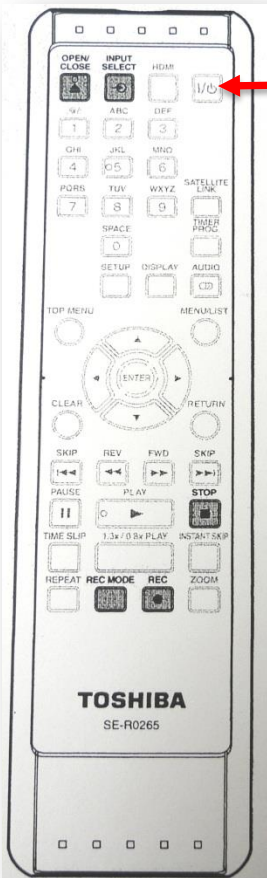

1 Power ON the DVD Recorder, BUT Please Remember to **TURN OFF** the recorder when you are finished with it.

2 Press [OPEN/CLOSE] to open the disc tray and insert your disc with its label facing up. **NOTE: Use Only DVD – R's for Recording**




3 Press [REC MODE] to select a recording mode.
For the best quality, select LP Recording Mode or anything above.

Recording mode	Recording time		Video/sound quality
	8cm Disc	12cm Disc	
XP	18 min	60 min	Good ↑ ↓ Poor
SP	36 min	120 min	
LP	72 min	240 min	
EP	108 min	360 min	
SLP	144 min	480 min	

4 Ensure that 1L(Rear) is displayed in the lower right hand corner of the monitor. **If not**, then select by pressing [INPUT SELECT] on the remote.

5 Press [REC] to start recording. **6** Press [STOP] to stop recording.
NOTE: This will lay down a New Track every time you do this.

Last Step: You need to Finalize your Discs to play back on other DVD devices

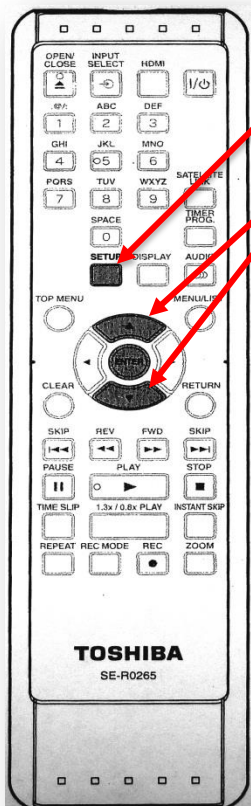

- 1** Press [SETUP].
 - 2** Use [▲ / ▼] to select "DVD Menu", then press [ENTER].
"DVD Menu" menu will appear.
 - 3** Use [▲ / ▼] to select "Finalize", then press [ENTER].
 - 4** Use [▲ / ▼] to select "Yes", then press [ENTER].
e.g.) VR mode DVD-RW
- Finalize disc?

Yes
No
- Finalizing will start.
- Finalizing
Finalizing
00%
- This operation may take awhile to be completed.
- 5** Finalizing is completed.

Don't forget to
turn OFF the
Recorder when
you are finished
with it.

If you have any **questions**, **problems** or if you would like to **schedule a training session**, please contact: Technology & Media Production Office: x 4-1130 (Monday-Friday, 9AM-5PM) or Email: a-v@esm.rochester.edu